




Slide-Ruler Ltd

Mobile +44(0)7831 826543 : Tel 0845 680 0738 : Fax 0845 680 680 0739 : Direct Dial +44 (0) 1904 341133


FITTING INSTRUCTIONS

Roller to cover attachment Kit

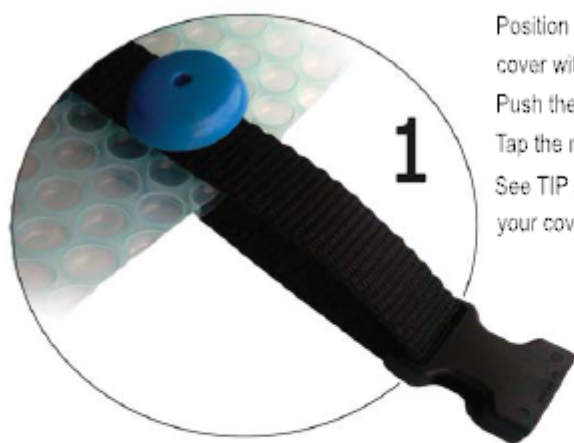

Position the top part of the short strap on the top surface of the cover with the bottom part of the strap going underneath the cover (See image 1)
Push the male toggle through the strap and the Cover.
Tap the male toggle into the female toggle with a hammer until closed.
See TIP at the bottom of the page. Cut off any surplus male part, as it could damage your cover.

To fasten the long straps to the roller tube (See image 2)
Drill 3mm holes in the roller at equal distances along the tube.
Push a screw through the washer and webbing strap, then screw it to the roller tube to secure the strap.
Repeat with each strap

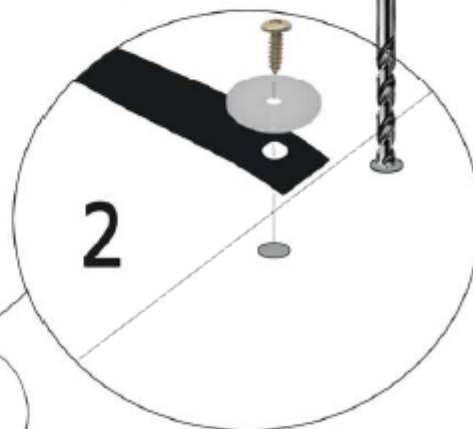

The quick release buckle simply clicks together (see image 3)
Then adjust the strap to the required length.
Repeat with each strap



Method for securing straps tightly

Use a large nut placed over the toggle on a firm surface, and tap it down with a hammer.
Once the Toggles (press fix connectors) have been fitted. Remove the surplus shank material to prevent damage to the cover.